

Baja Customs

Install Instructions

BC-5082, 5083

Coolant Tank Outlet Aluminum Fitting

1. Remove the two screws that hold the coolant tank to the firewall. Open the plastic clip to release the fuel line that is attached to the coolant tank. Then pull and lift the tank up to release it from its' lower rubber mount.



2. Now having access to the bottom outlet fitting, use a flathead screw driver to slid and release the locking clip on the stock fitting and pull the fitting off of the tank.



3. Remove the stock hose clamp and the locking clip.
Keep the locking clip it will be reused on the new fitting!



4. Place the locking clip onto the new fitting and insert the fitting onto the coolant outlet hose. You can use the stock hose clamp or the hose clamp provided with the kit if you are not confident in the stock one.



5. Press the new fitting onto the coolant tank nipple until you hear the locking clip snap into place. Pull on the fitting to make sure it is locked into place.
6. Put the tank back in place, replace the two screws and fuel line removed in step one.
7. Add coolant back to the tank. You should not have to bleed the system, if you are careful not to let too much coolant be lost

For technical assistance call: 949-229-0696 or email: info@bajacustoms.com